

CODABAR



ENABLE



DISABLE



DISABLE CDV



CDV & SEND CD

CODABAR



CDV & NOT SEND CD



MIN LENGTH (06)



MAX LENGTH (48)



ST/SP: abcd/abcd



ST/SP: ABCD/ABCD



ST/SP: ABCD/TN*E



ST/SP: abcd/tn*e

START / STOP



SEND START / STOP



Not Send START / STOP

Example of ST (Start) / SP (Stop)

123456	Not Transmit ST/SP
A123456B	ST/SP: ABCD/ABCD
a123456b	ST/SP: abcd/abcd
A123456N	ST/SP: ABCD/TN*E
a123456n	ST/SP: abcd/tn*e