


Scan Mode

Auto Sense Mode off

Decoding by pulling the trigger of the scanner when auto sense mode is off. It's default mode.

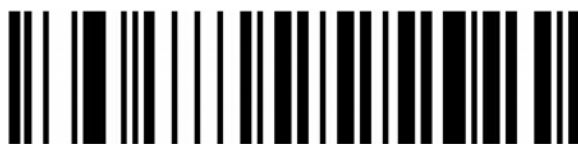

Off (Default)

Auto Sense Mode on

The scanner can sense barcode for decoding automatically.



On