

4.4 UPC-E



Disable UPC-E



Enable UPC-E



Not Transmit Check Digit



Transmit Check Digit



Not Transmit System Character "0"



Transmit System Character



Not Convert UPC-E To UPC-A



Convert UPC-E To UPC-A



Transmit UPC-E To UPC-A



Transmit UPC-E Country Code + System Character